
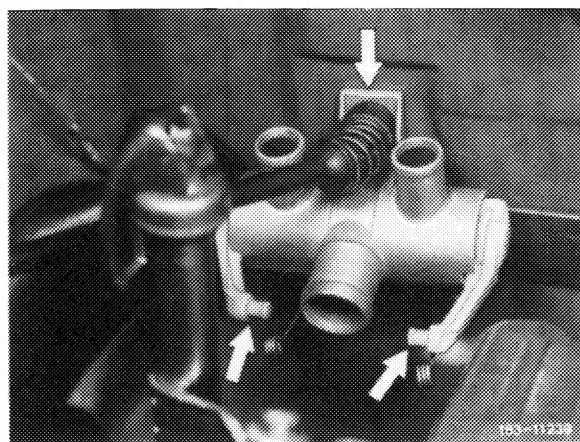


83—115 Removal and installation of water valve for heater

Removal

- 1 Drain approx. 2 litres of cooling water.
- 2 Loosen all hose clips on water valve.
- 3 Pull off heater hoses and disconnect both wires.
- 4 Turn out screw and remove water valve from front wall.

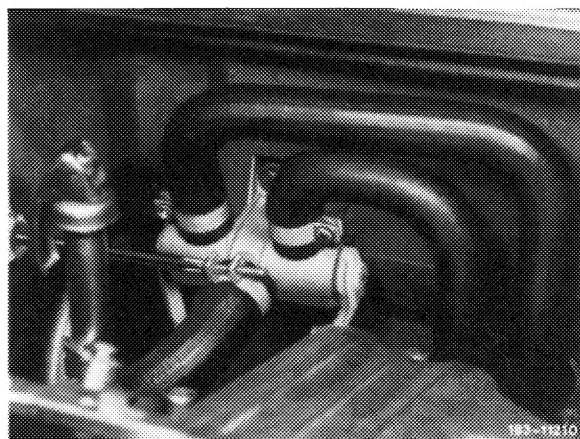

Installation

- 5 For installation proceed vice versa.